


Attaching a Mayline 36" Parallel Rule to a Futura Craft Station



For the Corner Plate Assembly (both sides):

Use a $5/64$ " drill bit to drill pilot holes.


Drill pilot holes $1\ 3/4$ " and $2\ 1/2$ " from edge of frame. Holes should be about $3/8$ " from the top of the glass.

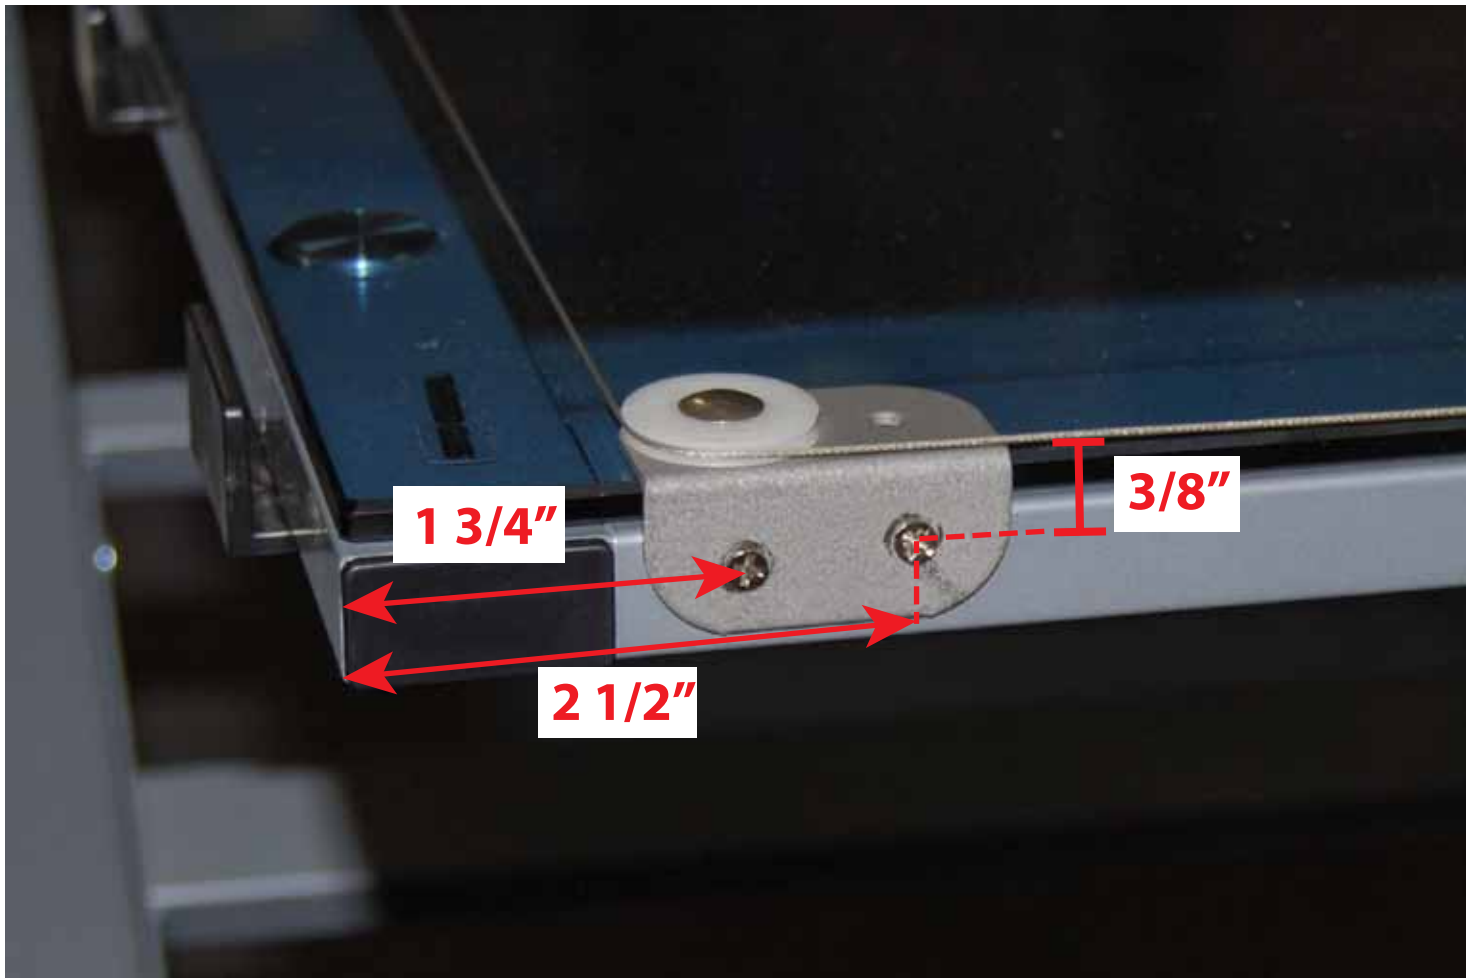

For the Stege Stop (both sides):

Use a $5/64$ " drill bit to drill pilot holes.

Drill pilot holes $1\ 5/16$ " from edge of frame. Holes should be about $3/8$ " from the top of the glass.

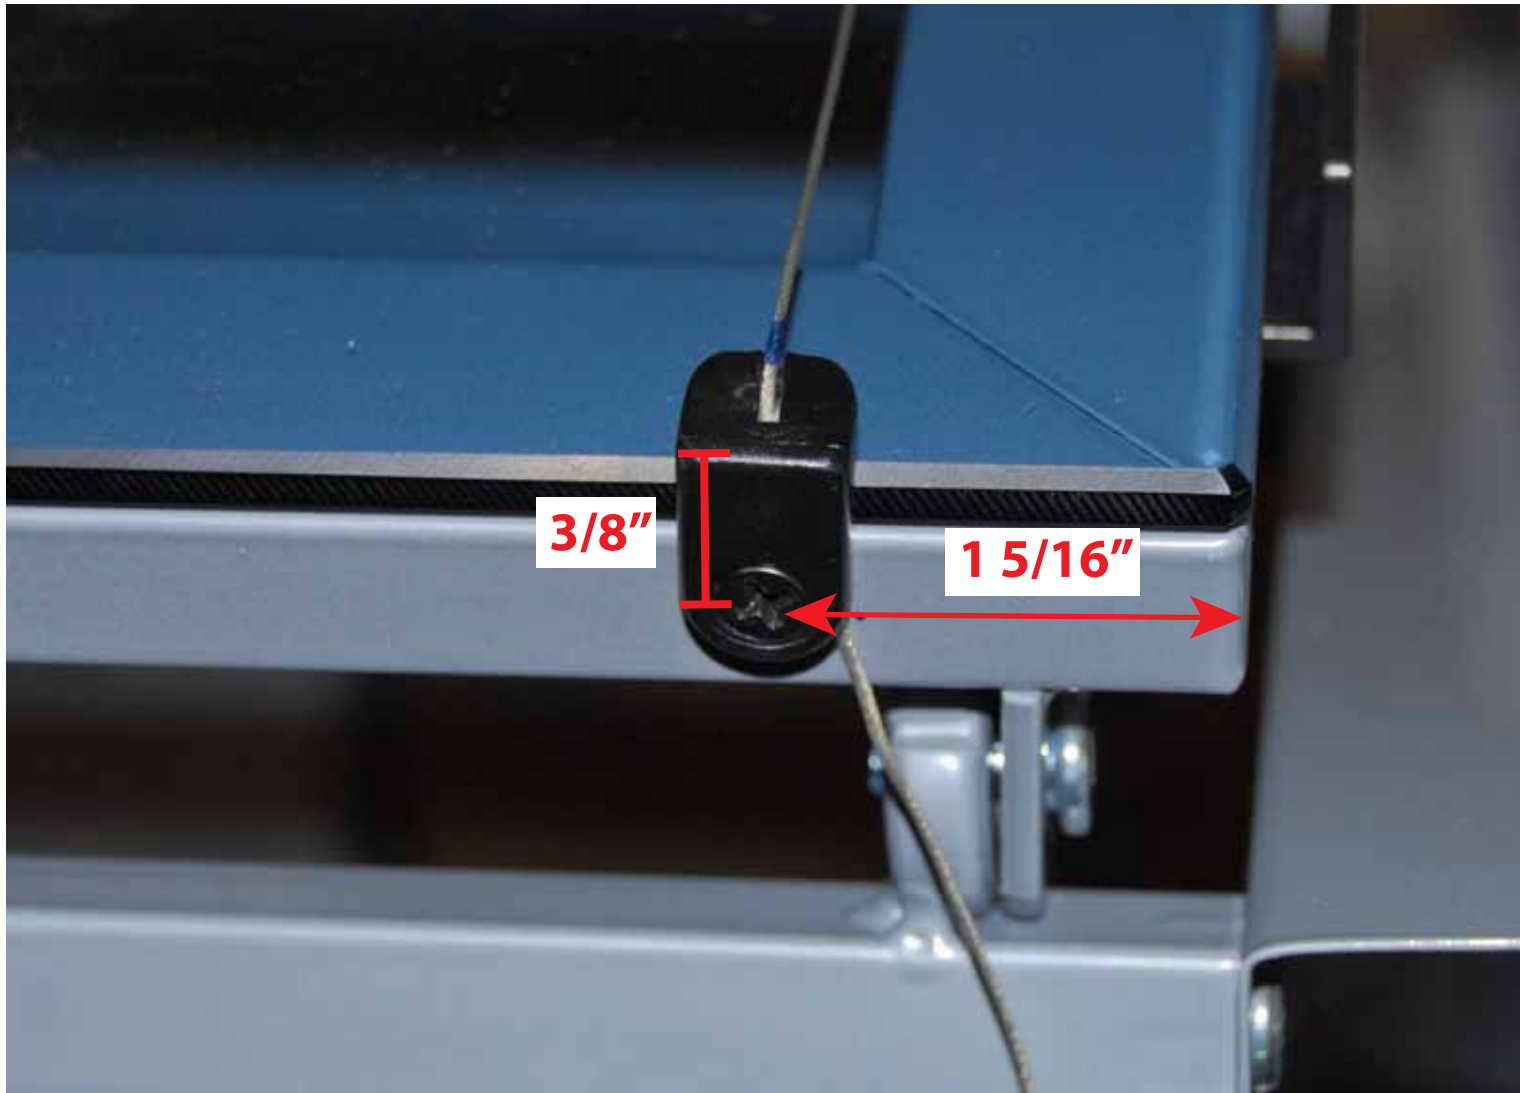

Follow Mayline assembly instructions to complete assembly